

# BLACKBIRD DESIGNS INC.



12721 Apple View Lane · Burnsville, MN 55337 · 952-894-7705 · Blackbirdbikes@aol.com · www.Blackbirdbikes.com

## BLACKBIRD SUNROOF ASSEMBLY & INSTALLATION




1. Install plastic clamp with tube around handle bar (about 2" below cross bar) and insert flexible plastic 1/4" rod (2 places per bike).



2. Install plastic clamp to UPPER seat back support (2 places per bike).
3. Install plastic tube to LOWER seat back support with ziptie (2 places per bike).
4. Insert 30" fiberglass rod through clamp (upper support) and into tube (lower support) (2 places per bike).

**CAUTION: Rods are fiberglass and may cause skin irritation for some people.**

# BLACKBIRD SUNROOF ASSEMBLY & INSTALLATION

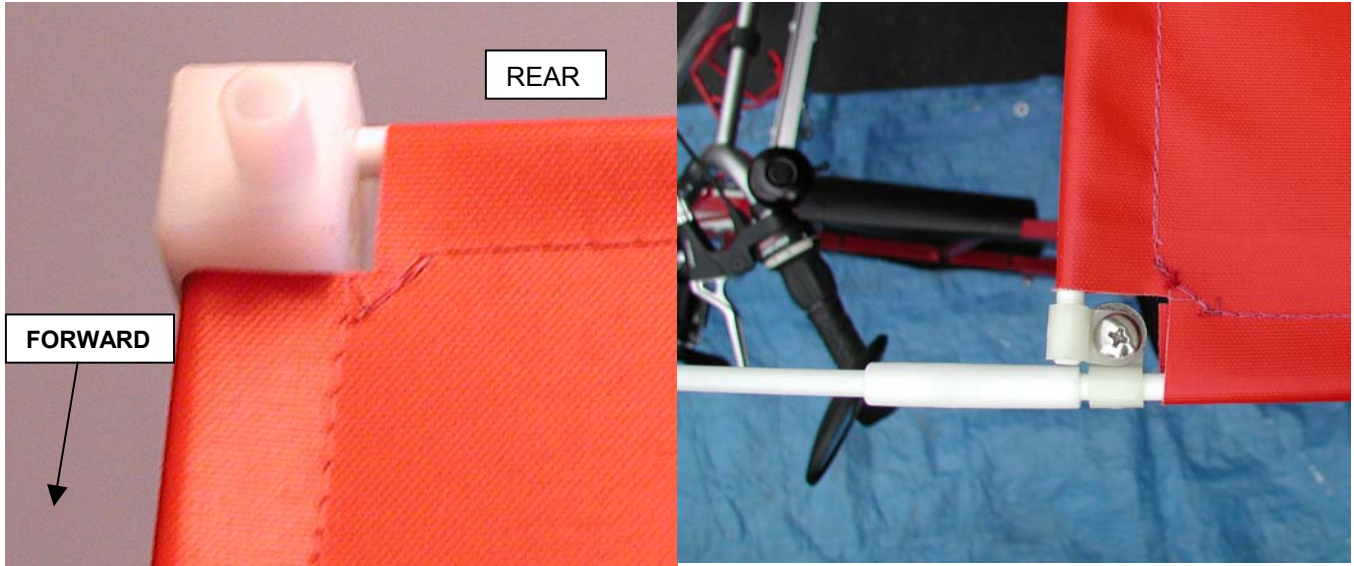

5. Install 23 3/8" rods through fabric front edge (start at any edge) & rear edge.
6. Install 24 1/2" rods through fabric side edges.
7. Assemble corner block as shown with tube at inside corner, block is slightly longer front to rear.
8. Install 23 3/8" rod at the rear into both blocks (not all the way through) (can use a hammer).
9. Install 24 1/2" rods into corner blocks, all the way through (can use a hammer) (2 places).
10. At the front corners, install plastic clamps with screw/washer/nut provided (2 places).
11. Install plastic tubes to rods at front corners. If they are loose, they can be glued in place. Once the Sunroofs are assembled they are generally left together and only the vertical rods are removed.
12. Install Sunroof on both 30" rods at the rear and flexible rods at the front.



Should look like this when done. The plastic clamps on the handlebars can be moved up and down so that the Sunroofs are horizontal.